

STREET LIGHT 9156, 9157, 9158

OPTONICA LED



Watts(W)	Current (A)	Rated Input Voltage (V)	CCT(K)	Ra	PF	Ta(°C)	Pole diameter(mm)
20	0.1	100-240V AC 50/60 Hz	3000/4000/5700	≥70	≥0.9	-20~45	φ60, 48
30	0.14						
40	0.19						
50	0.24						
60	0.29						
70	0.33						

Dimension:(mm)

Watts(W)	L(mm)	W(mm)	H(mm)	Pole diameter(mm)
20/30/40	405	117	64	48
50/60/70	474	155	64	48
20/30/40	425	117	76	60
50/60/70	494	155	76	60

Using and Maintenance:

- The luminaires shall be installed and maintained by qualified electrician and wired in accordance with the latest IEC electrical regulations or national requirements.
- If the external flexible cable or cord of this luminaire is damaged, it shall be replaced by the manufacturer or his service agent or a similar qualified person.
- To prevent the risk of electric shock, turn off power supply before installation. It is not permitted to connect the luminaire to high-voltage AC supply line directly.
- The luminaire is in accordance with EN 60598-1:2015 and European standards.
- The luminaire must be wired and grounded correctly. The input voltage and current must meet the requirements. The supplier will not be responsible for the consequences for inappropriate operation.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
- This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Operative instructions

- Choose how to install the street light if with the bracket in axis (Mode 1) or perpendicular to its body (Mode 2). The bracket can be released by removing the screws that attach to the street light.
- Connect to the power line using IP65 connectors and respecting the connection diagram.
- Insert the street light to the ø60mm pole, tightening the screws on it.
- After selecting the Installation Mode, you can further orient the street light by some degree by sliding the screws on the grooves. (-10°~+10°)
- Finally, tighten definitively bracket's screws to ensure it to the street light.