

OPTONICA LED

Product installation instructions

Solar Light



Time switch



Intelligent light control




Wireless remote control

IMPORTER: Prima Group 2004 LTD, Bulgaria, 1784 Sofia, Mladost 1, bl. 144, Ground Floor;
Phone: +359 2 988 45 72;

Applicable model

5460
5461
5462
5463

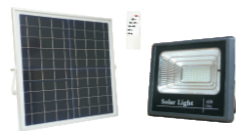

Installation Guide




Plug the twist after the twist cap

Tips The battery must be fully charged before using 3-5 rainy days.

Installation Notes

- Solar lights in the factory has been charged with electricity, you can normally light, please check the lights before installation Whether it is working properly;
- The lamp and solar panels connected to the solar panel against the light, the light does not shine, unplug the connector light, Light sense normal;
- On the front of the lamp, 5meters above the lights by AUTO(red), the button lights flash 5 under the lights and remote control is normal;
Note: the remote control must be remote control receiver, or remote control is not sensitive remote control distance 8-15m;
- A. the lamp with two inflated studs on the wall, as schematically;
B. The solar panel Angle adjusts according to the light intensity and time;
C. lamps can not be installed in low-lying areas, so as not to soak;
- Plug the male and female plugs and tighten the waterproof cap and install it.
- After installation check the installation is solid, use the remote control of the lamp to check;

Remote control key instructions

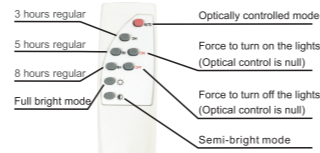


Applicable model

9135
9136




1.Usage method

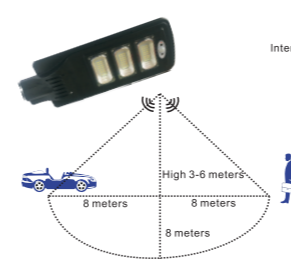


3 functional modes

- First mode: Long press 5-8 seconds- Radar mode, Moving objects into the sensing area, All the lights are on. Leave sensing area, Light opening, (human sensor is effective)
- Second mode(1seconds press):light on medium brightness(Radarinduction is not effective)
- Third mode(1seconds press):off

Remote control key instructions

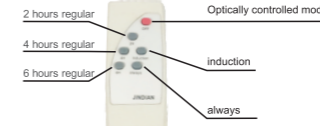

Installation Guide

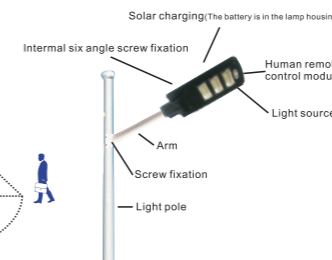

Installation method


- To adjust the desired pattern
- The lamp mounted to the Arm, Adjusting inner six angle screw (Solar panels toward the sun)
- The arm is mounted to the wall or pole

Applicable model

9137
9138




Installation Guide

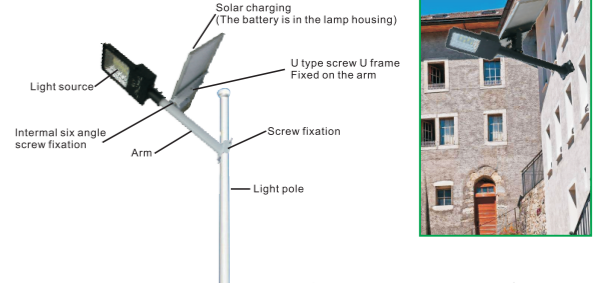

Installation Notes

- Solar lights in the factory has been charged with electricity, you can normally light, please check the lights before installation Whether it is working properly;
- The lamp and solar panels connected to the solar panel against the light, the light does not shine, unplug the connector light, Light sense normal;
- On the front of the lamp, 5meters above the lights by AUTO(red), the button lights flash 5 under the lights And remote control is normal;
Note: the remote control must be remote control receiver, or remote control is not sensitive remote control distance 8-15m;
- A. the lamp with two inflated studs on the wall, as schematically;
B. The solar panel Angle adjusts according to the light intensity and time;
C. lamps can not be installed in low-lying areas, so as not to soak;
- Plug the male and female plugs and tighten the waterproof cap and install it.
- After installation check the installation is solid, use the remote control of the lamp to check;

Remote control key instructions

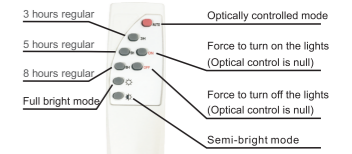

Applicable model

9137
9138



List

1		2	
	Solar panel		Solar light
3		4	
	Remote control		expansion screw
5		6	
	U-frame		5m wire

Applicable model

9135
9136



List

1		2	
	Solar panel & Solar light		Remote control

Applicable model

5460
5461
5462
5463



List

1		2	
	Solar panel		Solar light
3		4	
	Remote control		expansion screw
5		6	
	U-frame		5m wire

Product warranty card

Hello! Thank you very much for your purchase of our company's solar lights. To Provide you with quality products and after-sales service, and fully protect your consumer rights and interests is our company in accordance with relevant state regulations, the implementation of the obligations. Therefore, the following warranty service terms: service commitment: are entitled to "one month replacement, one year to protect all the strength of the solar lights, the service." "Repair of" Undertaking" Ordinance: since the date of purchase within one month, after the inspection by our company is indeed the quality of the product itself, unconditional replacement of the same model of products, back and forth freight borne by our company. If there is no problem or man-made damage to the product, the return freight will be borne by the customer and the maintenance fee will be charged. Warranty Ordinance:

- Any normal use of quality problems, from the date of purchase within one year can enjoy free warranty service, back and forth freight will be borne by our department. If there is no problem or man-made damage to the product, the return freight will be borne by the customer and the maintenance fee will be charged.
- Product appearance damage, etc., do not implement the replacement policy.
- Product accessories and gifts are not included in the package, warranty or repair scope.
- The customer can enjoy the after-sale service on the basis of warranty card and purchase voucher. Fourth, in the following circumstances, the company only provides the warranty card automatic failure, repair service:
 - The warranty card or purchase certificate is lost, altered or expired;
 - Due to natural disasters, man-made or improper operation and other on-product itself;
 - Products were not authorized by our department to repair, disassemble or refit;
 - The appearance of the product is seriously damaged or unrecognized.
 - Beyond the warranty period.

User information	User name: address:	Telephone:
First after service record		
Maintenance date: Processing results: Signatures of maintenance personnel	Fault problem: <input type="checkbox"/> Fix <input type="checkbox"/> Good maintenance <input type="checkbox"/> change	
Second after sale service record		
Maintenance date: Processing results: Signatures of maintenance personnel	Fault problem: <input type="checkbox"/> Fix <input type="checkbox"/> Good maintenance <input type="checkbox"/> change	