

OPTONICA

PORTABLE PARTY BLUETOOTH SPEAKER

USER MANUAL

PRODUCT FEATURES

- Portable party Bluetooth speaker
- Built-in Bluetooth
- Multi functional speaker - supports USB flash drive, Micro SD card, Bluetooth, FM radio, AUX jack & Microphone input
- Built-in rechargeable battery
- With charger, microphone, remote control

SAFETY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place to user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This unit is not a toy.


INSTRUCTIONS FOR USE

When the device can not be turned on, or low power, please charge the speaker.

TURN ON/OFF THE SPEAKER


Switch to the ON position, device boot, enter Bluetooth mode, turn ON the phone Bluetooth, search to the device, click the Bluetooth name, click ON the connection, show the successful connection, you can play mobile song.

1. MIC. VOL: Adjusting to strengthen or weaker the mic volume.
2. (*) Long press button 2 (LIGHT) for open/shut the led light. Short press button 2 (LIGHT) to switch various led modes. No led light when in FM mode.
3. (BASS BOOST) Short press for open/shut the bass boost.
4. (TWS) Bluetooth series connection. In Bluetooth mode, when two speakers are working simultaneously, both speakers can play music through the same mobilphone at the same time.
5. (REC) Insert USB or TF card, at the same time insert wired mic or open wireless mic, and then short press button 5 (REC), enter REC status. Short press button 5 (REC) again, exit REC status and play the recording content. Long press button 5 (REC) to play the recording content repeatedly.

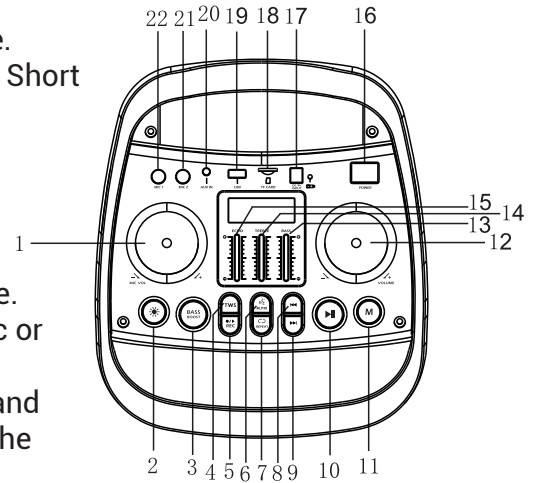

6. (MIX PRI) When playing music, insert wired or open wireless mic, short press button 6 (PRI), the music volume will decrease when sing with mic. Short press button 6 (PRI), exit Mix priority mode, the music volume unchanged when sing with mic.
7. (REPEAT) Short press button 7 (REPEAT), for repeatedly playing a single song. Short press button 7 (REPEAT) again, play all songs in a loop.
8. (PREV) Short press button 8 (PREV) to the last song when playing music, and to the previous radio station when FM mode.
9. (NEXT) Short press button 9 (NEXT) to the next song when playing music, and to the next radio station when FM mode.
10. (PLAY/PAUSE) When playing music, short press button 10 (PLAY/PAUSE), music play or pause. Short press button 10 (PLAY/PAUSE) to auto search radio station when in FM mode, and exit after searching all radio station.
11. MODE: Short press button 11 (MODE), switch to bluetooth mode/USB mode/TF mode/FM mode/line in mode.
12. VOLUME: Adjustment knob, for adjusting the music volume.
13. BASS: Adjusting to the strengthen or weaken music bass response
14. TREBLE: Adjusting to the strengthen or weaken music treble response
15. MIC. ECHO: To control the depth of the mixer sound
16. POWER SWITCH
17. DC: Wired DC in 9V port
18. TF CARD: TF card port
19. USB: USB port
20. LINE IN: Line input port
21. MIC 2: Wired mic port 2
22. MIC 1: Wired mic port 1

CONTROL REMOTE

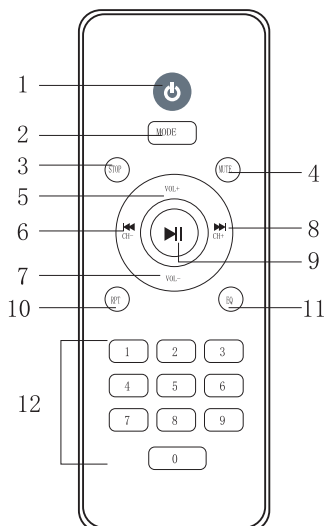

1. ON/OFF
2. MODE (USB/TF/FM/BT/LINE-IN)
3. STOP
4. MUTE
5. VOLUME +
6. PREV
7. VOLUME -
8. NEXT
9. PLAY/PAUSE
10. REPEAT PLAY
11. EQ
12. 0-9 NUMBER